

e x e v o i p

Enabling remote access for D-link DSL604T

Log in to your modem, input 10.1.1.1 into your internet address bar, username: admin password: admin

- 1) Once logged into your modem click on tools
- 2) Click on admin which is on the left hand side
- 3) State: click on enable
- 4) Ip: 220.233.2.126 Netmask: 255.255.255.255

Once that has been once please click on apply.

The screenshot displays the D-Link DSL-G604T Web Management interface. The top navigation bar includes 'Home', 'Advanced', 'Tools' (highlighted with a red box and a '1'), 'Status', and 'Help'. On the left sidebar, the 'Admin' button is highlighted with a red box and a '2'. The main content area is titled 'Administrator Settings' and contains two sections: 'Modify admin password' and 'Modify user password'. Below these is the 'Remote Web Management' section, where the 'State' is set to 'Enabled' (highlighted with a red box and a '3'), the 'IP Address' is '220.233.2.126' (highlighted with a red box and a '4'), and the 'Netmask' is '255.255.255.255'. The 'Remote Telnet Management' section is also visible at the bottom, with 'State' set to 'Disabled'.