

Netcomm V300 Setup Guide (Using ATA only)

Connections

1. Connect the Network Cable from the ADSL modem to the WAN port.
2. Connect the Telephone to the Phone port.
3. Connect the Telephone line to the Line port (Required If Using Life Line Feature)
4. Connect Computer to the LAN port.



Configuration

1. Open up the web browser (Internet Explorer)
2. Enter the V300 IP address in the address bar (192.168.30.1)
3. Enter in username and password. (“admin” for both username and password)
4. Click on SIP under VOIP Options.
5. Under The “Configuration” tab enter in the following fields.
 - a. Phone Number – (VoIP Phone number)
 - b. Display Name – (VoIP Phone number)
 - c. Auth ID – (VoIP Phone number)
 - d. Auth Pass – (VoIP Password)
 - e. Proxy / Register – sip00.exetel.com.au or sip01.exetel.com.au
 - f. Domain – sip00.exetel.com.au or sip01.exetel.com.au
 - g. Codec – G.729
 - h. DTMF – RFC2883
 - i. Port – 5060
6. Click on Apply
7. Click on “Save” under “System”

SIP Phone number – This would be provided in the setup email that Exetel would of sent out when the account was activated. Eg (0282051234)

Auth Pass – Password needed to successfully register to the VoIP service. Password is “CaSe SeNsiTiVe” please make sure it is exactly as it is shown in the email.